



DESIGNER DIAMOND™ Technique Step by Step #7 - Deluxe Selection

1. You have 17 menu's plus alphabets on your DESIGNER DIAMOND™ sewing and embroidery machine.



2. Touch Sewing.



3. Touch the Start Menu to open the Extended Tool Bar.




4. The Stitch Menus automatically opens.









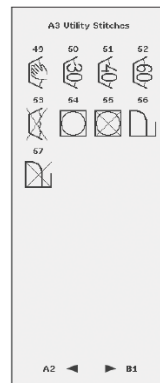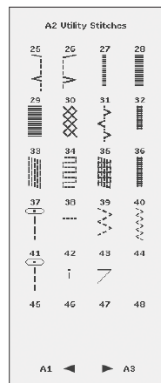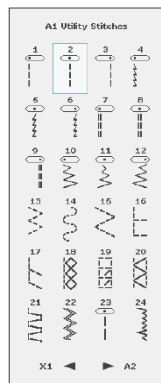






5. Menu A1 Utility Stitches is the default menu when you turn on your DESIGNER DIAMOND™ sewing and embroidery machine.








6. For most stitch menus, there are one or more sub menus. When a menu is highlighted, sub menus are shown.











7. To scroll to the next menu, touch the right arrow located at the bottom of the stitch panel. 
8. Touch the Start Menu to open the Extended Tool Bar. 
9. The stitch menus will appear. 
10. Touch Menu G, Children Stitches. Select stitch G2:44  
11. Touch the STOP Function Button to stitch only one of the stitches. 
12. Sew the stitch.
13. Touch Mirror End-to-End to mirror the stitch upside down. 
14. Touch the STOP button. 
15. Sew the stitch.
16. Touch Mirror Side-to-Side to mirror the stitch left to right. 
17. Touch the STOP button. 
18. Sew the stitch.
19. The default length 32.0 is shown in black.
20. Touch the STOP button. 
21. Touch Stitch Length + to lengthen the stitch to 48.0.
22. Sew the stitch.
23. Touch Stitch Length – to reduce the stitch length to 20.0.
24. Touch the STOP button. 
25. Sew the stitch.
26. Touch Stitch Width. The + is grayed out because the stitch width is already at the widest setting. Decrease the stitch width to 5.0 

ALT

1. The controls on your screen can change depending on what stitch you have chosen. Most stitches have the ALT feature to adjust stitch density and/or stitch position. 
2. When you touch ALT, the Stitch Width and/or Stitch Length controls will change.
3. The arrows beside the ALT icon will indicate which controls are activated when ALT is selected.
4. When the arrow points up, the stitch length becomes density. 
5. When the arrow points to the left, stitch width becomes stitch positioning. 
6. When both arrows are active, both are activated. 
7. Touch ALT. The Stitch Width icon is now Stitch Positioning. 
8. Use the + to move the selected stitch to the right and the – to move the stitch to the left.
9. Touch ALT to return the control to Stitch Width.

Program:

1. You can combine stitches and/or letters and numbers to create stitch programs. Not all stitches are available to program. A pop-up message “Not a programmable stitch” will notify you if you select an unavailable stitch.
2. Touch the PROG icon. 
3. Touch Stitch Menu to view the stitch menus. 
4. Select Menu L 
5. Touch right arrow L2 to move to the next menu. 
6. Touch L2:33
7. One stitch will appear.

8. Touch Font Menu. 
9. Select Brush Line Font. 
10. Character Selection screen will open.
11. Enter a space, your name using upper and lower case letters, then another space.
12. Touch Stitch Menu 
13. Touch L2:33
14. Touch Selective Thread Cutter. 
15. To close the Program window and sew your programmed stitch, just press the foot control to begin sewing or touch OK and then press the foot control or Start/Stop to begin sewing. 