

## *Husqvarna Embroidery Card 21 – Programmable Lettering*

 
Embroider block, script and calligraphy upper and lower case letters in two sizes for monograms, labels, embellishment and more. Program monograms and words for the standard or Plus hoop on the top of the line Husqvarna Viking #1+ or stitch perfect placement one by one on the Rose.

### *Husqvarna Viking #1+*

Slide in embroidery card 21 and companion cassette. Touch Embroidery ON.

Touch FUNC to Program mode, The “E” inside the hoop will appear on the left end of the Programdisplay window. If Plus Hoop programming is desired, touch the rotational arrow **E** one time and you will see the hoop in the Programdisplay window change into a Plus Hoop with a small arrow pointing to the top portion of the hoop, indicating position 1.

Toward the right side of the Programdisplay window are F1S1M1. F1 = Font style (1, 2 or 3), S1 = Size (1 or 2) and M1 = Menu (1, 2 or 3).



FONT: Select 1. Palace Script 2. Clarendon (block) 3. Kalligraphia

(Note: Programmed letters are always displayed in block)

SIZE: Select 1. Large 30mm 2. Small 12mm

MENU: Select 1. Upper case, 2. Lower case, or 3. Numbers and Symbols (consult booklet)—check Programdisplay for upper or lower case indication.

**Note: You must select the Font, Size and Menu before selecting the letter desired.**

#### **Standard Hoop:**

The Standard Hoop will be displayed at left of Programdisplay. In empty Program mode, touch first letter of name, enter --> (cursor moves to receive next letter). Change menu to M2 if lower case desired for remainder of name. Touch next letter, enter -->, continue entering letters until audible beep signals maximum number of letters have been entered for standard hoop size. No need to program in a STOP; your Husqvarna Viking #1+ will only sew the name or word out one time. Hoop fabric and slide hoop in place. Touch function to REP, then RUN to sew letters. Lettering will automatically center in hoop, beginning at lower left corner.

***Hint: To check size before sewing name, touch the four parameter arrows. If size is too large or small, touch the stitch length and width plus or minus buttons to change size slightly.***

#### **Plus Hoop:**

Touch function to PROG and clear out memory or find a clear memory. Touch Rotate **E**. Hoop at left end of Programdisplay now turns into a Plus Hoop as illustrated above. Select desired Font, Size and Menu and program in letters. As letters are programmed, you will see the arrow indicating position on the hoop move to the next position automatically. When you run out of room, the hoop will flash and you will hear a beep. Go to another empty menu to program in the next line. Slide hoop in place and set to P1. Touch REP. Sew until machine stops. Slide hoop to P2. Sew until machine stops. Slide hoop to P3. Complete lettering. The letters will automatically line up. Go to next memory, move needle position below first row of stitching and sew. Use parameter arrows to check positioning.

To edit lettering, move cursor back to error, touch clear and re-enter balance of lettering program.

**Note:** An embroidery card will flash on the Programdisplay when a memory containing a lettering program from Embroidery card 21 is selected without having Embroidery card 21 in the machine. You will need to clear the memory or move to an empty memory to program regular stitches.

## ***Husqvarna Viking Rose***

Insert Embroidery Card. The flashing numbers on the Infodisplay (1-1) indicate the FONT and SIZE. To change the left number (Font), touch button 33 (1. Palace Script, 2. Clarendon (block), 3. Kalligraphia). To change the right number (Size), touch button 34 (1. Large – 30mm, 2. Small – 12mm). The MENU button indicates 1. upper case, 2. lower case, 3. Numbers and symbols (consult booklet). The letters stitch one at a time in the Normal function.

### **Standard Hoop:**

Slide on embroidery hoop with fabric. Touch first letter, move needle to left side of hoop. Touch RUN and sew first letter. Touch next letter, change size and upper or lower case if needed and sew. Repeat until all letters are sewn.

***Hint:*** When sewing upper and lower case letters as in a name, each letter will automatically line up with the previous one.

### **Plus Hoop:**

Slide on embroidery hoop with fabric and set position to P1. Touch rotation; you will see the **E** facing downward. Touch first letter, sew, touch next letter, sew, repeat until end of Position 1. Each letter will line up with the previous letter. Slide hoop to P2. Using the arrow, move the needle up until it lines up with the previously ended stitch. Sew. Continue sewing letters in position 2. They will continue to line up automatically. Slide hoop to P3 and line up needle as with position 2. Continue sewing in position 3.

## ***Husqvarna Viking Iris and Scandinavian 300***

Insert Embroidery Card. The flashing numbers on the Infodisplay (1-1) indicate the FONT and SIZE. To change the left number (Font), touch button “**A**” (1. Palace Script, 2. Clarendon (block), 3. Kalligraphia). To change the right number (Size), touch button “**SIZE**” (1. Large – 30mm, 2. Small – 12mm). The **MENU** button indicates 1. upper case, 2. lower case, 3. Numbers and symbols (consult booklet). The letters stitch one at a time in the Normal function.

To select the letter you want, refer to the red # in the upper corner, by the letter, and enter that number.

### **Standard Hoop:**

Slide on embroidery hoop with fabric. Touch first letter, move needle to left side of hoop. Touch RUN and sew first letter. Touch next letter, change size and upper or lower case if needed and sew. Repeat until all letters are sewn.

***Hint:*** When sewing upper and lower case letters as in a name, each letter will automatically line up with the previous one.

### **Plus Hoop:**

Slide on embroidery hoop with fabric and set position to P1. Touch rotation; you will see the **E** facing downward. Touch first letter, sew, touch next letter, sew, repeat until end of Position 1. Each letter will line up with the previous letter. Slide hoop to P2. Using the arrow, move the needle up until it lines up with the previously ended stitch. Sew. Continue sewing letters in position 2. They will continue to line up automatically. Slide hoop to P3 and line up needle as with position 2. Continue sewing in position 3.

***Note:*** Embroidery Card 21 lettering can not be used with the Customizing system for either the Husqvarna Viking #1+ or Rose.