


Sensor Q Foot

Touch  to set the Sensor Foot Pressure for the Sensor Q Foot. Touch  after use to return to normal settings.

Since the hole in the Sensor Q Foot is too narrow to allow the needle to move sideways, the stitch width is automatically set to 0 for all stitches when  is selected.

Note: The Sensor Q Foot is an optional accessory for free motion sewing, embroidery and quilting on thick or batted fabrics.


Sewing Buttonholes

- Fold fabric in two and place stabilizer underneath.
- Place fabric under Sensor Buttonhole Foot. The measurement wheel can be raised to a stop by lifting the toe of the foot, which makes it easier to place the fabric under the presser foot.


Use the markings on the left toe of the Sensor Buttonhole Foot to position the garment edge. Place the edge of the garment at the middle mark to have 5/8" (15 mm) from the edge to the buttonhole.

- Step on the foot control, the Sensor Buttonhole Foot lowers automatically. A straight stitch is sewn away from you indicating the left buttonhole column, then the satin column is sewn toward you. This is repeated for the right column. The bartacks are automatic (Illustration 1). Keep the foot control depressed until the Thread Cutter cuts the threads and the Sensor Buttonhole Foot is raised.


When sewing buttonholes without satin stitches or when using presser foot C, the sewing steps are different (there is no straight stitch step). See Illustration 2.

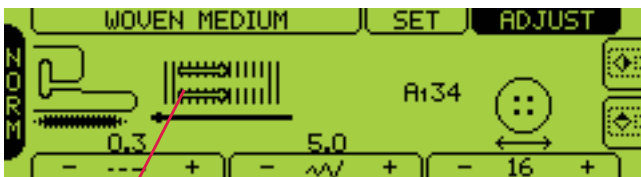


Arrows indicating sewing direction for a satin stitch buttonhole

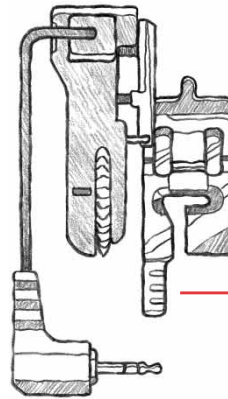

5/8" (15 mm) Buttoning Edge

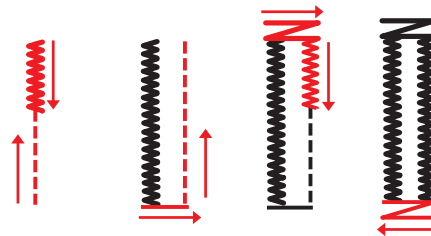

1. Sewing direction for satin stitch buttonholes sewn with the Sensor Buttonhole Foot

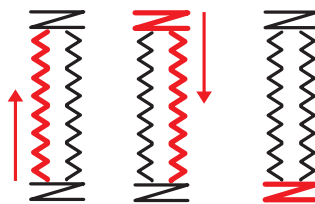

2. Sewing direction for buttonholes without satin stitches or satin stitch buttonholes sewn with presser foot C

Programming

Both the stop- and fix functions can be programmed. The stop function is programmed when you want to sew only one sequence of your program. The fix function can be used if you want to fix at the end or in the beginning of a stitch within the programmed combination.

Internet Update!

All information in this Husqvarna Viking Designer II User's Guide is current at the time of printing.

We constantly receive feedback from Designer II owners and dealers. This information is used to produce program updates. Those updates are available to you via the Internet.

Be sure to regularly consult the web site at www.husqvarnaviking.com and/or your local Husqvarna Viking dealer for updates and upgrades to your Designer II and User's Guide.

Embroidery Features

Recommended hoop size in the HELP menu.

The new Mid Size Hoop as a new optional hoop size to select from the Hoop menu.

